



AHT-E300 ADSL Router

User Manual

This Guide is a copyright of:

Samsung Electro-Mechanics Co., Ltd.
314 Maetan-3 Dong, Paldal-Gu
Suwon, Kyunggi-Do, 442-743
Korea.

AHT-E300 ADSL Router User Manual

Europe Edition (March 2002)

Table of Contents

Chapter 1. Introduction	1
Features	2
Package Contents	2
System Requirements	2
Front Panel LEDs	3
Rear Panel	3
Chapter 2. Preparing ADSL Router Settings	4
2.1 Hardware Installation	5
Hardware Installation	5
General ADSL Connection Setup	5
2.2 Network Setup	6
Network Setting	6
Chapter 3. Web-based Management	8
Appendix I. Specifications	30
Appendix II. Troubleshooting	31
Troubleshooting Flow Chart	31
Solution 1	32
Solution 2	32
Solution 3	33
Solution 4	33
Solution 5	34
Other Troubles	35
Appendix III. Glossary	36

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received
- (3) Including interference that may cause undesired operation.

* Microsoft Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Chapter

1

Introduction


This chapter introduces features, component and panel layout of the AHT-E300 ADSL Router and explains the structure of this guide.

Thank you for purchasing Samsung AHT-E300 ADSL Router. This guide describes the installation and basic configuration of the AHT-E300 ADSL Router.

Features

- Automatic IP Configuration with DHCP Server/Client functions
- Internet phone, Internet Game, Netmeeting and Internet Messenger support
- Interoperable with ANSI T1.413 Issue 2, G.DMT and G.LITE specification
- Compatible with major DSLAM in the world including DSLAM of BEZEQ
- 8 PVCs (simultaneous and encapsulation independent)
- VPI/VCI range 0-255, 0-65536
- Encapsulation hunting of up to 8 pre-defined VPI/VCI & encapsulation sets
- AAL5 UBR & CBR
- OAM F4/F5

Package Contents

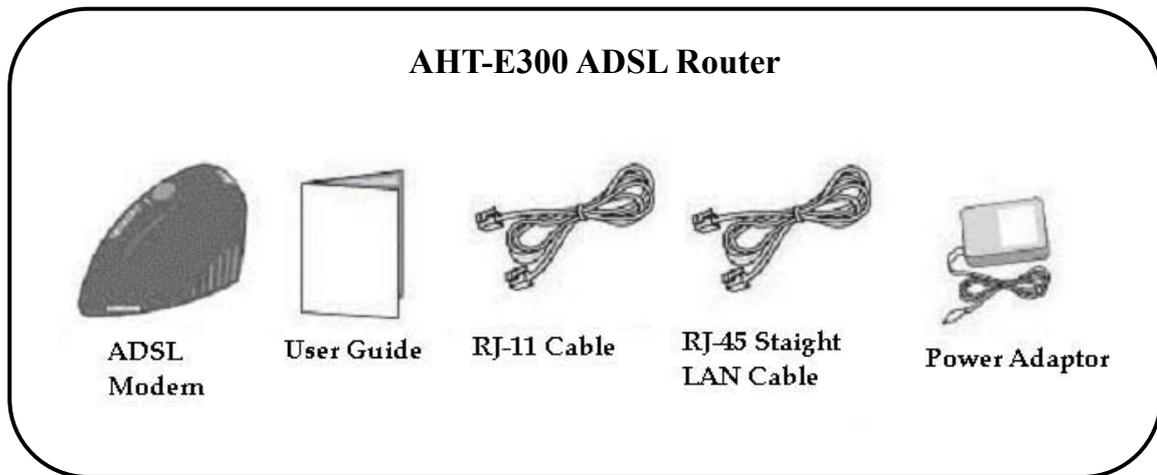

System Requirements


- One Active ADSL Internet connection
- One PC with 10Mbps, 100Mbps or 10/100 Mbps Ethernet card
- TCP/IP protocol stack installed in the PC or Mac
- Microsoft Internet Explorer 4.0 or later, or Netscape 4.0 or later
(Internet Explorer 5.0 and Netscape 4.7 or later is highly recommended)

The Front Panel LEDs



LED	Status	Description
Power	On	Power on
	Off	No power
LAN	On	LAN connection is active.
	Off	LAN connection is not active.
RXD	Blinking	Data is being transferred.
	Off	Data is not transferred.
LNK (ADSL)	Blinking	Modem is trying to sync with DSLAM.
	On	ADSL sync is finished.

The Rear Panel

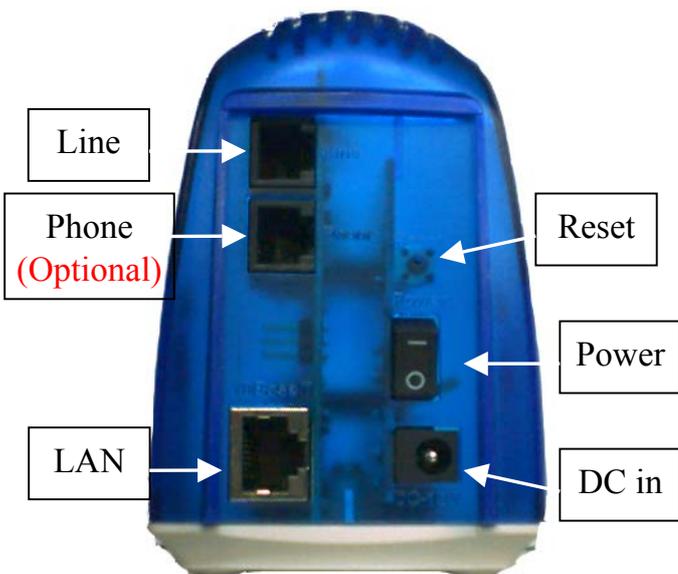

Port	Description
Line	Connect RJ-11 cable to ASDL port of micro-filter
LAN	Connection to PC. Use the supplied RJ-45 Straight Through Cable.
Reset	Pressing the Reset Switch and holding it for 5-seconds will restore the factory default settings.
Power	Turn on or off the power.
DC in	Connect the supplied Power Adapter.

Chapter

2

Preparing ADSL Router Settings

This chapter describes preparing ADSL Router settings, such as Hardware Installation and Network Settings for PC.

2.1 Hardware Installation

The connection diagram below is the example that you can configure network using AHT-E300 ADSL Router. Install and connect your AHT-E300 ADSL Router in order as follows:

Hardware Installation

- 1. Connect the Power** Connect the AC Power Adapter cord into the power jack on the rear panel of the AHT-E300 ADSL Router and plug the adapter into the power source. Check the Power LED is flashing.

Warning: Use the supplied power adapter (DC 14V) only to prevent the permanent failure of AHT-E300 ADSL Router.


- 2. Connect the Micro-Filter** To use the phone service and ADSL service simultaneously, install the micro-filter to the wall-jack.

Warning: If you don't use the micro-filter to your phone service, the service quality of phone service may be degraded.


- 3. Connect the ADSL Line** Interconnect the supplied RJ-11 cable between LINE port of the modem and ADSL port of the micro-filter.

- 4. Connect the RJ-45 Straight through cable** Interconnect the supplied RJ-45 Straight-through Ethernet Cable between LAN port of the modem and LAN port of the PC or Mac.

General ADSL Connection Setup #1

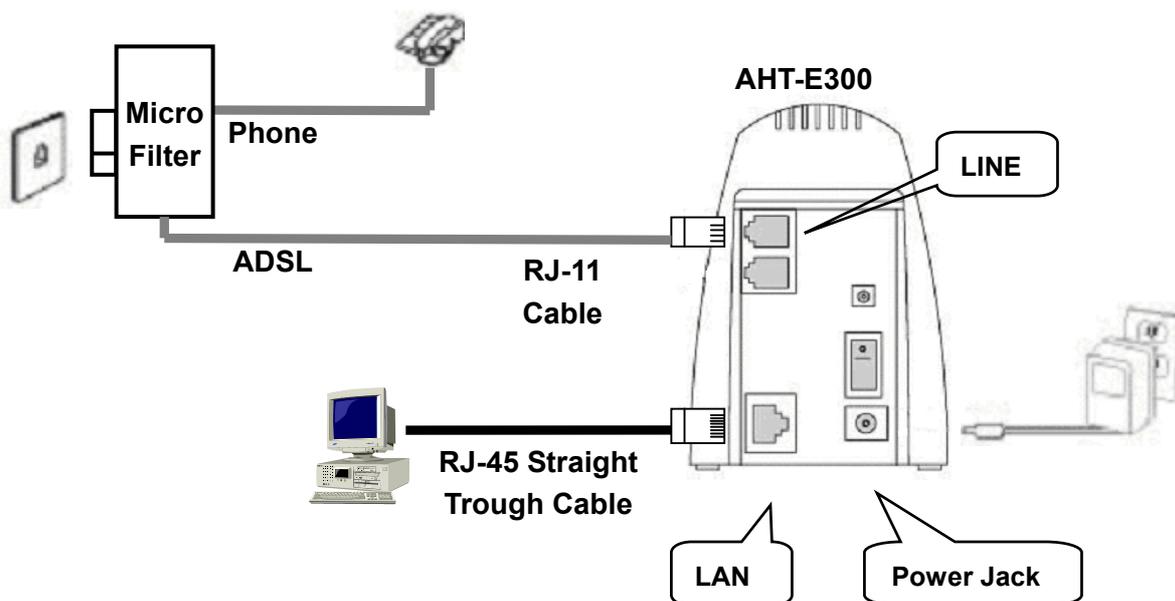

General ADSL Connection Setup #2

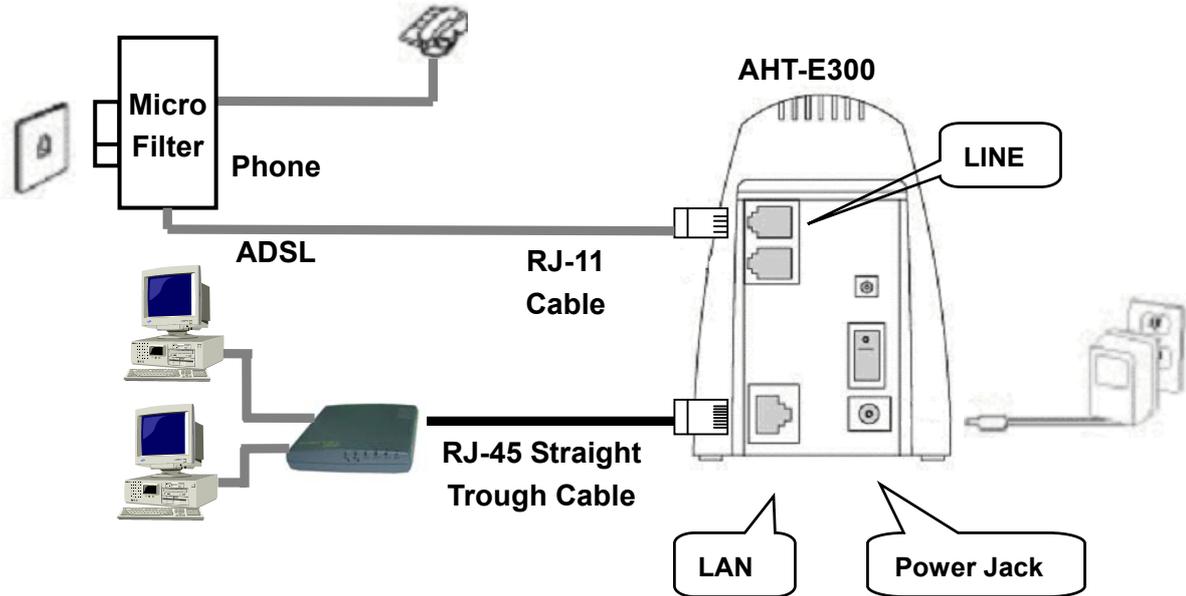


2.2 Network Settings for PC

Network Setting

- Step 1** After clicking [Start] button in Taskbar, select **Settings** and then **Control Panel**.

***Notice:** These instructions apply to PCs installed with MS-Windows ME only. Linux or Macintosh machine may have different steps from mentioned in this Guide. Please refer to the operating system's manual.*

- Step 2** Double-clicking the **Network** icon in Control Panel, the following window will appear.

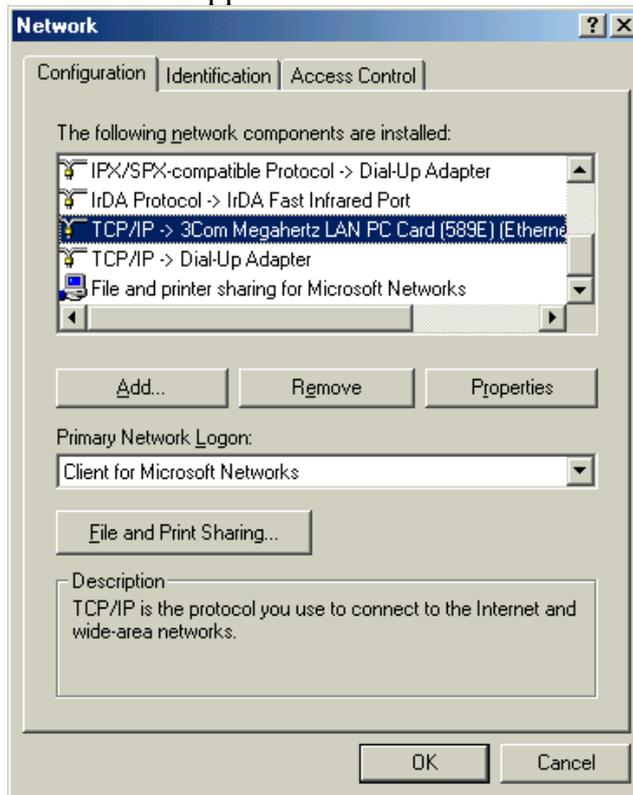


- Step 3** In the **Configuration** tab, you can see several network components under **The following network components are installed:**. Make it sure that a network adapter connected with AHT-E300 ADSL Router appears in the list of the network components.

Notice: *The network adapter must be installed in order to progress the setting. If the network adapter is not installed, contact customer support of the network adapter.*

- Step 4** Double click **TCP/IP**.

- Step 5** Click [**TCP/IP Properties**] button, and **IP address** tab. You can choose one of the following options to set TCP/IP values.

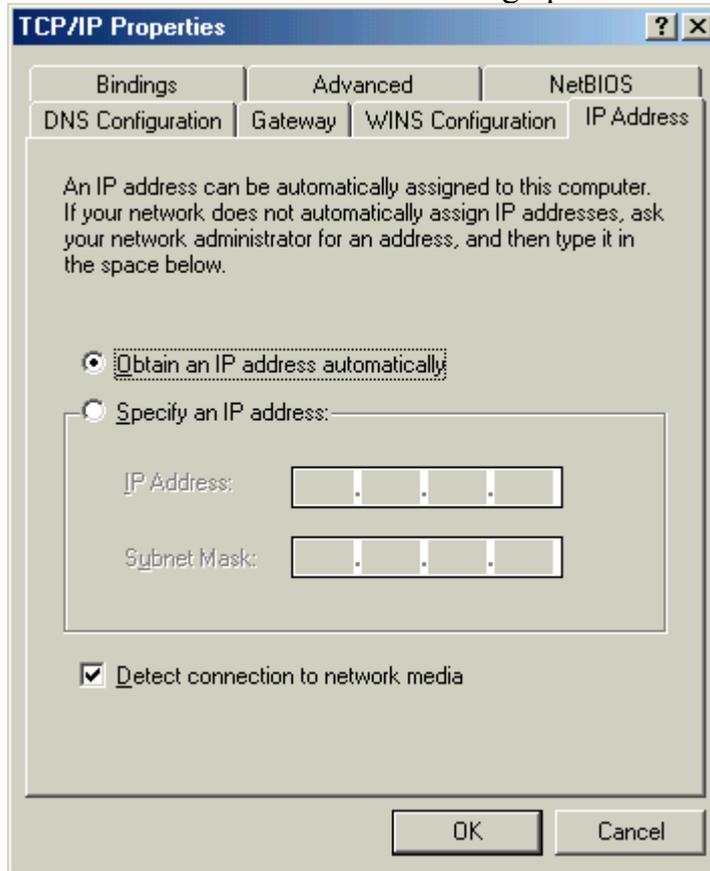

Obtain an IP address automatically (Recommended) If you want to obtain an IP address of PC automatically from DHCP server of AHT-E300, check on this radio button.

Specify an IP address If you want to use an assigned (static) IP address, and set the IP Address as 10.0.0.1, Subnet Mask as 255.255.255.0 and Gateway 10.0.0.2.

Notice: When you want to use static IP address, you should set the IP address as the same subnet with AHT-E300 ADSL Router.

- Step 6** Click [**OK**] button. Windows may ask for original Windows installation disk. Insert the installation disk if needed.
- Step 7** Windows will ask you to restart the PC. Click [**Yes**] button. The TCP/IP settings of PC have been completed.

Chapter

3

Web-based Management

This chapter explains how to manage the AHT-E300 ADSL Router.


Notice: You must set up AHT-E300 ADSL Router via LAN. Make sure that the PC is connected to AHT-E300 ADSL Router.

Start-up with Web-based Management

1. Open your Web Browser on your PC that is connected to AHT-E300 ADSL Router..

Notice: Internet Explorer 4.0 or higher version is recommended

Type “**http://10.0.0.2**” in the browser’s **Address** box and Press **Enter**. This address is the default LAN IP address of AHT-E300 ADSL Router.

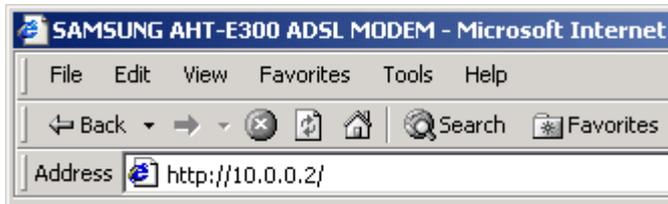

A user name and password prompt will appear. Type **User Name** as **admin** and **password** as **conexant**.

Notice: You can change the password later.



Notice: If the user name and password prompt appears again, it means unauthorized user. Please check Caps Lock key. AHT-E300 ADSL Router distinguishes the uppercase and lowercase letters (in the password).

2. Click [OK] button. Then the brief information page (default page) will appear. In this page, you can check the firmware version (in this example, 021302_RELB_S), WAN IP addresses and LAN IP address.

Home Page

Firmware Version: ETHADSL_USB_021302_RELB_S
 Showtime Firmware Version: 2.24 3/15
 Customer Software Version: 0.0.1

WAN

IP Address	Subnet Mask	MAC Address

LAN

IP Address	Subnet Mask	MAC Address
10.0.0.2	255.0.0.0	00:30:CD:00:07:12


Number of ethernet devices connected to the DHCP server: 1

	IP Address	MAC Address
1	10.0.0.14	00:01:02:8B:B8:0B

Notice: The AHT-E300 ADSL Router has DHCP server inside, so you can see the IP addresses that is assigned from that DHCP server, if you enable the DHCP server function and obtain IP address automatically.

- Click [ADSL] link. Then the ADSL Status page will appear. In this page, you can check ADSL link status.

ADSL Line State	The status of the line synchronization
ADSL Startup Attempts	How many times the modem try to sync.
Elapsed Time	How long the modem operates.
SNR Margin	Attained Signal to Noise Margin
Line Attenuation	Attenuation from the DSLAM
Errored Seconds	How long the modem drop the sync
Loss of Signal	How many times the modem drop the sync
Loss of Frame	How many frames the modem drops
CRC Errors	CRC errors during the sync
Data Rate	Set by the DSLAM
Latency	Set by the DSLAM

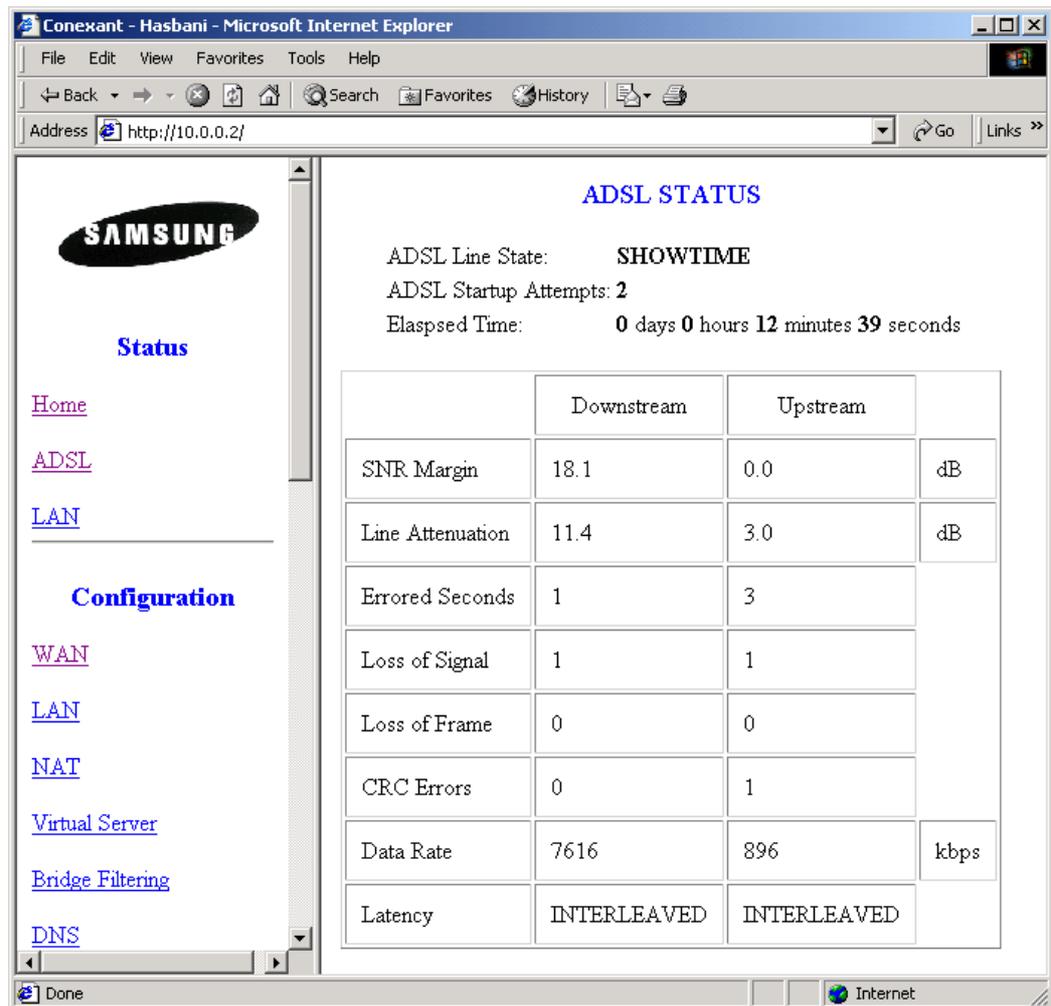

4. Click [**LAN**] link. Then the LAN Status page will appear. In this page, you can check LAN status.

LAN	
IP Address	IP address of the modem
Subnet Mask	Subnet mask of the modem
MAC Address	MAC address of the modem
IP Address that is assigned from the DHCP server in the modem	
IP Address	IP address of the PC that is connect to the modem
MAC Address	MAC address of the PC that is connect to the modem

LAN

IP Address	Subnet Mask	MAC Address
10.0.0.2	255.0.0.0	00:30:CD:00:07:12

Number of ethernet devices connected to the DHCP server: 1

	IP Address	MAC Address
1	10.0.0.14	00:01:02:8B:B8:0B

Ethernet Link Status: UP
USB Link Status: DOWN

- Click [WAN] link. Then the LAN Status page will appear. In this page, you can check LAN status.

Default Gateway	For bridge operation, it doesn't work.
Per VC Settings	
Enabled?	It enables or disables the VC (Virtual Channel).
VPI?	VPI Number that is used in the network.
VCI?	VCI Number that is used in the network.
Static IP Address	Virtual IP address that is identified by the VC.
Subnet Mask	Subnet mask that is identified by the VC
ATM	
Service Category	You can select UBR or CBR by the service.
Bandwidth	Select 0, if you want automatic operation.

WAN Configuration

System Wide Settings

Default Gateway

PPP Half Bridge

Per VC Settings

Enabled?	VPI	VCI	Static IP Address	Subnet Mask
<input type="text" value="Yes"/>	<input type="text" value="0"/>	<input type="text" value="38"/>	<input type="text" value="192.168.241.101"/>	<input type="text" value="255.255.255.0"/>

MAC SPOOFING

Mac Spoofing

Mac Address

ATM

Service Category

Bandwidth kbps

Encapsulation	You can select several encapsulation methods. The AHT-E300 ADSL Router can support various encapsulation methods. But to be sure, contact your service provider.
Bridge	For RFC1483 Bridged IP LLC encapsulation, Bridge must be enabled.
IGMP	Internet Group Management Protocol.
PPP	
Service Name	For some PPPoE connection, service name may be required.
User Name	For PPP operation, type your username that is given by your service provider.
Password	For PPP operation, type your password that is given by your service provider.
Disconnect Timeout	When there's no traffic, AHT-E300 router can disconnect the ADSL connection. If you type '0', it will not disconnect the connection.
Authentication	PPP user authentication method. Choose Auto if you want to negotiate with server automatically.
Automatic Reconnect	In case of abnormal disconnecting from the server, you can reconnect to the server automatically.

ENCAPSULATION

BRIDGE

IGMP

PPP

Service Name

Username

Password

Disconnect Timeout seconds (Max:32767)

Authentication

Automatic Reconnect

DHCP	
DHCP Client enable	To get an IP address from the network, you may enable this. This feature depends on your service provider.
Host Name	This option is not required for the normal operation.
Virtual Channel	Select VC first that you want to configure.
Execute/Reset	If you finish configuring VC, you must click [Execute].
Save Configuration	If you click [Execute], then you must save all configurations to flash memory and reboot the AHT-E300 ADSL Router.

DHCP

DHCP client enable

Host Name

Virtual Circuit:

Submit

Reset

Settings need to be saved to Flash and the system needs to be rebooted for changes to take effect.

[Save Configuration](#)

6. Click Configuration - [LAN] link. Then the LAN Configuration page will appear. In this page, you can configure LAN settings.

LAN configuration	
IP Address	IP address of the modem
Subnet Mask	Subnet mask of the modem
DHCP Server	
DHCP address pool selection	Select User Defined if you want to allocate the IP addresses that will be assigned to the PCs.
User Defined Start Address	Start address of IP address pool
User Defined End Address	End address of IP address pool
Lease Time	Select 0 if you want to auto-management
User Mode	Only single user mode is working in this version
Ethernet Mode	Select Autosense if you want to auto-sensing.

LAN Configuration

IP Address

Subnet Mask

DHCP Server

DHCP address pool selection System Allocated
 User Defined

User Defined Start Address

User Defined End Address

Lease Time days hours minutes seconds

User Mode

[Ethernet Mode Setting](#)

Settings need to be saved to Flash and the system needs to be rebooted for changes to take effect.

- Click Configuration - [NAT] link. Then the NAT Configuration page will appear. In this page, you can configure NAT function.

NAT	
NAT	Simply convert private IP address to public IP address
NAPT	In addition to the NAT function, it can translate port information.
Disable	Disabling NAT function.

NAT Configuration

NAT

Session Name	User's IP	Action
		Add <input type="button" value="v"/>

#	Session Name	User's IP

[Session Name Configuration](#)

Settings need to be saved to Flash and the system needs to be rebooted for changes to take effect.

8. Click Configuration - [**Virtual Server**] link. Then the Virtual Server Configuration page will appear. In this page, you can configure the port mapping information. If you use NAT function in the AHT-E300 ADSL Router, every port will be blocked after NAT. So, if you want to use some special application like on-line game or some other peer-to-peer software, you must open the port to specific host PC. To use this function, host PC must have static IP address, such as 10.0.0.10. To know the exact port number that the software is using, contact the software maker.

Virtual Server Configuration

ID	Public Port	Private Port	Port Type	Host IP Address
- Use the following form to add special port that you want to be opened for your special application				
<input type="text" value="1"/>	<input type="text"/>	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>
				<input type="button" value="Add This Setting"/>

9. Click Configuration - [**Bridge Filtering**] link. Then the Bridge Filtering configuration page will appear. In this page, you can configure bridge-filtering function.

Bridge Filtering

Enable Bridge Filtering: Yes No

ID Source MAC* Destination MAC* TYPE**

1 Block Forward

* MAC address should looks like 000002fa6fab

** TYPE is Ethernet type should looks like a5ff

10. Click Configuration - [**DNS Configuration**] link. Then the DNS Configuration page will appear. In this page, you can choose the default DNS configuration. If you want to use static DNS server, type your DNS server in the Preferred DNS server. Or if you want to use automatic discovered DNS server, choose 'Use Auto Discovered DNS Servers Only'.

DNS Configuration

DNS Proxy Selection

User Configuration:

Preferred DNS Server

Alternate DNS Server

Settings need to be saved to Flash and the system needs to be rebooted for the changes to take effect.

11. Click Admin Privilege - [**WAN Status**] link. In this page you can check the WAN connection status.

WAN

IP Address	Subnet Mask	MAC Address
166.79.36.242	255.255.0.0	00:30:CD:00:07:13

Virtual Circuit:

12. Click Admin Privilege - [ATM Status] link. In this page you can check the ATM connection status.

ATM STATUS

Tx Bytes	404602
Rx Bytes	12138855
Tx Cells	7634
Rx Cells	229096
Rx HEC Errors	0
Tx Mgmt Cells	39
Rx Mgmt Cells	0
Tx CLP0 Cells	7642
Rx CLP0 Cells	229352
Tx CLP1 Cells	0
Rx CLP1 Cells	0
Rx Errors	0
Tx Errors	0
Rx Misrouted Cells	0

- Click Admin Privilege - [PPP Status] link. In this page you can check the PPP connection status.

PPP

VC	Status	Pkts Sent	Pkts Rcvd	Bytes Sent	Bytes Rcvd
0	Connected	4457	8734	196199	13016236
1	N/A	N/A	N/A	N/A	N/A
2	N/A	N/A	N/A	N/A	N/A
3	N/A	N/A	N/A	N/A	N/A
4	N/A	N/A	N/A	N/A	N/A
5	N/A	N/A	N/A	N/A	N/A
6	N/A	N/A	N/A	N/A	N/A
7	N/A	N/A	N/A	N/A	N/A

Virtual Circuit:

14. Click Admin Privilege - [TCP Status] link. In this page you can check the TCP connection status.

TCP STATUS

Total Packets Sent	210
Data Packets Sent	97
Data Bytes Sent	55195
Total Packets Received	200
Packets Received in-sequence	38
Bytes Received in-sequence	11711
Out of Order Packets	37
Out of Order Bytes	0
Packets disgarded for bad checksum	0
Packets disgarded for bad header offset	0
Packets disgarded because too short	0
Connections Initiated	0
Connections Accepted	38
Connections Established	38
Connections Closed	36

15. Click Admin Privilege - [**Route Table**] link. In this page you can check the Route Table.

Route Table

Destination	Netmask	Gateway	Interface
0.0.0.0	0.0.0.0	166.79.36.241	ppp1
10.0.0.0	255.0.0.0	10.0.0.2	br0
127.0.0.1	255.0.0.0	127.0.0.1	lo0
166.79.36.241	255.255.255.255	166.79.36.242	ppp1

Destination	Gateway	Netmask	Action
<input type="text"/>	<input type="text"/>	<input type="text"/>	Add <input type="button" value="v"/>

Note: Save changes to flash to restore on power up.

16. Click Admin Privilege - [**Learned MAC Table**] link. Then the Bridge MAC Table page will appear. In this page, you can check the expiration time of the learned MAC table. In this example, every 100 seconds, AHT-E300 renew the MAC table.

Bridge MAC Table

MAC Address	Expiration
00:01:02:8B:B8:0B	100

Aging Timeout

17. Click Admin Privilege - [**ADSL Configuration**] link. Then the ADSL Configuration page will appear. In this page, you can change the ADSL options.

Trellis	When you using G.DMT protocol, enabling trellis option may get more data rate.
Handshake Protocol	You can select G.DMT or ANSI T1.413.
Wiring Selection	You must select Tip/Ring.

ADSL Configuration

<input type="text" value="Enabled"/>	Trellis
<input type="text" value="Autosense - G.dmt first"/>	Handshake Protocol
<input type="text" value="Tip/Ring"/>	Wiring Selection
<input type="button" value="Submit"/> <input type="button" value="Reset"/>	

Settings need to be saved to Flash and the system needs to be rebooted for changes to take effect.

- 18. Click Admin Privilege - [**RIP Configuration**] link. Then the RIP Configuration page will appear. In this page, you can enable the RIP (Routing Information Protocol) function to communicate with other router.

RIP Configuration

RIP

Supplier

Gateway

Multicast

Interval Seconds

Settings need to be saved to Flash and the system needs to be rebooted for changes to take effect.

- 19. Click Admin Privilege - [**Password Configuration**] link. Then the password Configuration page will appear. In this page, you can change the password of the AHT-E300 ADSL Router. The default password is “conexant”.

Admin Password Configuration

For FTP to work, the password for Admin should be at least 8 characters. Do not use '&' in the password.

Admin Password

Settings need to be saved to Flash and the system needs to be rebooted for changes to take effect.

20. Click Admin Privilege - [**Misc. Configuration**] link. Then the miscellaneous Configuration page will appear. In this page, you can configure miscellaneous functions.

WAN side HTTP	You can access this web-server.
FTP server	You can access the FTP server inside the modem.
DMZ	If this function is enabled. DMZ HOST IP can be accessed through NAT directly without blocking.
DMZ HOST IP	IP address of the PC that is accessed directly through the ADSL connection.
PPP reconnect on WAN access	When there's any WAN access from the client PC, AHT-E300 ADSL Router connects PPP connection automatically.

Miscellaneous Configuration

WAN side HTTP server	<input type="text" value="Disabled"/>
FTP server	<input type="text" value="Enabled"/>
TFTP server	<input type="text" value="Disabled"/>
HTTP server port	<input type="text" value="80"/>
<hr/>	
DMZ	<input type="text" value="Disabled"/>
DMZ HOST IP	<input type="text" value="0.0.0.0"/>
<hr/>	
DNS Proxy	<input type="text" value="Enabled"/>
DHCP Relay	<input type="text" value="Disabled"/>
DHCP Target IP	<input type="text" value="0.0.0.0"/>
<hr/>	
IGMP Proxy	<input type="text" value="Disabled"/>
PPP reconnect on WAN access	<input type="text" value="Disabled"/>

Settings need to be saved to Flash and the system needs to be rebooted for changes to take effect.

21. Click Admin Privilege - [**Diagnostic Test**] link. In this page, you can test the AHT-E300 ADSL Router.

Testing Ethernet LAN connection	Testing the LAN connection between the Modem and the PC
Testing ADSL Synchronization	Testing ADSL link
Test ATM OAM Segment Loop Back	Testing OAM function
Test ATM OAM End-to-End Loop Back	Testing OAM function
Test Ethernet connect to ATM	Testing the connection between the Ethernet layer and the ATM layer.
Test IP connect to Ethernet	Testing the connection between IP layer and the Ethernet layer.

Diagnostic Test

```

Checking LAN Connection
  Testing Ethernet LAN connection           : PASS  HELP

Checking ADSL Connection
  Testing ADSL Synchronization             : PASS  HELP

Checking Circuit 0 for Network Connection
  Test ATM OAM Segment Loop Back          : FAIL  HELP
  Test ATM OAM End-to-End Loop Back       : FAIL  HELP
  Test Ethernet connect to ATM            : PASS  HELP
  Test PPP Layer connection                : PASS  HELP
  Test IP connect to PPP                   : PASS  HELP

Testing Internet Connection
  Ping default gateway 166.79.36.241     : PASS  HELP
    
```

Notice: If some test has failed, you can click [**HELP**] link to check how to avoid that situation.

22. Click Admin Privilege - [Code Image Update] link. In this page, you can upload the updated firmware.

Code Image Update

Notice: Code image update is used only for minor update.

23. Click Configuration - [**Save Settings**] link. When every configuration is finished, you must write setting to flash memory and reboot the modem to take effect.

Write settings to flash and reboot.

24. Click Admin Privilege - [**Reset to Factory Default**] link. In this page you can restore all the factory default settings.

Reset settings to factory default and reboot.

Appendix

I

Specifications

General	
Model Name	AHT-E300
LAN Specification	IEEE 802.3, 802.1d
WAN Specification	ANSI T1.413 Issue 2 ITU-T G.992.1 (G.DMT) ITU-T G.992.2 (G.LITE) ITU-T G.994.1 (G.HS)
Power Adaptor	Input: 230VAC 50Hz Output: 13.8VDC, 1A
Certification	FCC Part 15 Class B EN 55022

Physical and Environment	
Dimension (W * D * H)	70.9*140.5*110.3 (mm)
Weight	280g (Modem only)
Operating ambient temperature	0 °C ~ +40 °C with airflow
Storage ambient temperature	-10 °C ~ +85 °C
Operating Humidity	10% to 90% non-condensing
Non-operating storage humidity	5% to 95% non-condensing
Connector	Two RJ11 Jack (pins 3&4, tip and ring)
Operating Distance	Up to 18,000ft (26AWG)


Notice: The specifications can be changed without a prior notice.

Appendix

III

Troubleshooting**Troubleshooting Flow Chart**

If you have any trouble using AHT-E300 ADSL Router, Follow this Flow-Chart and go to solutions as next page.

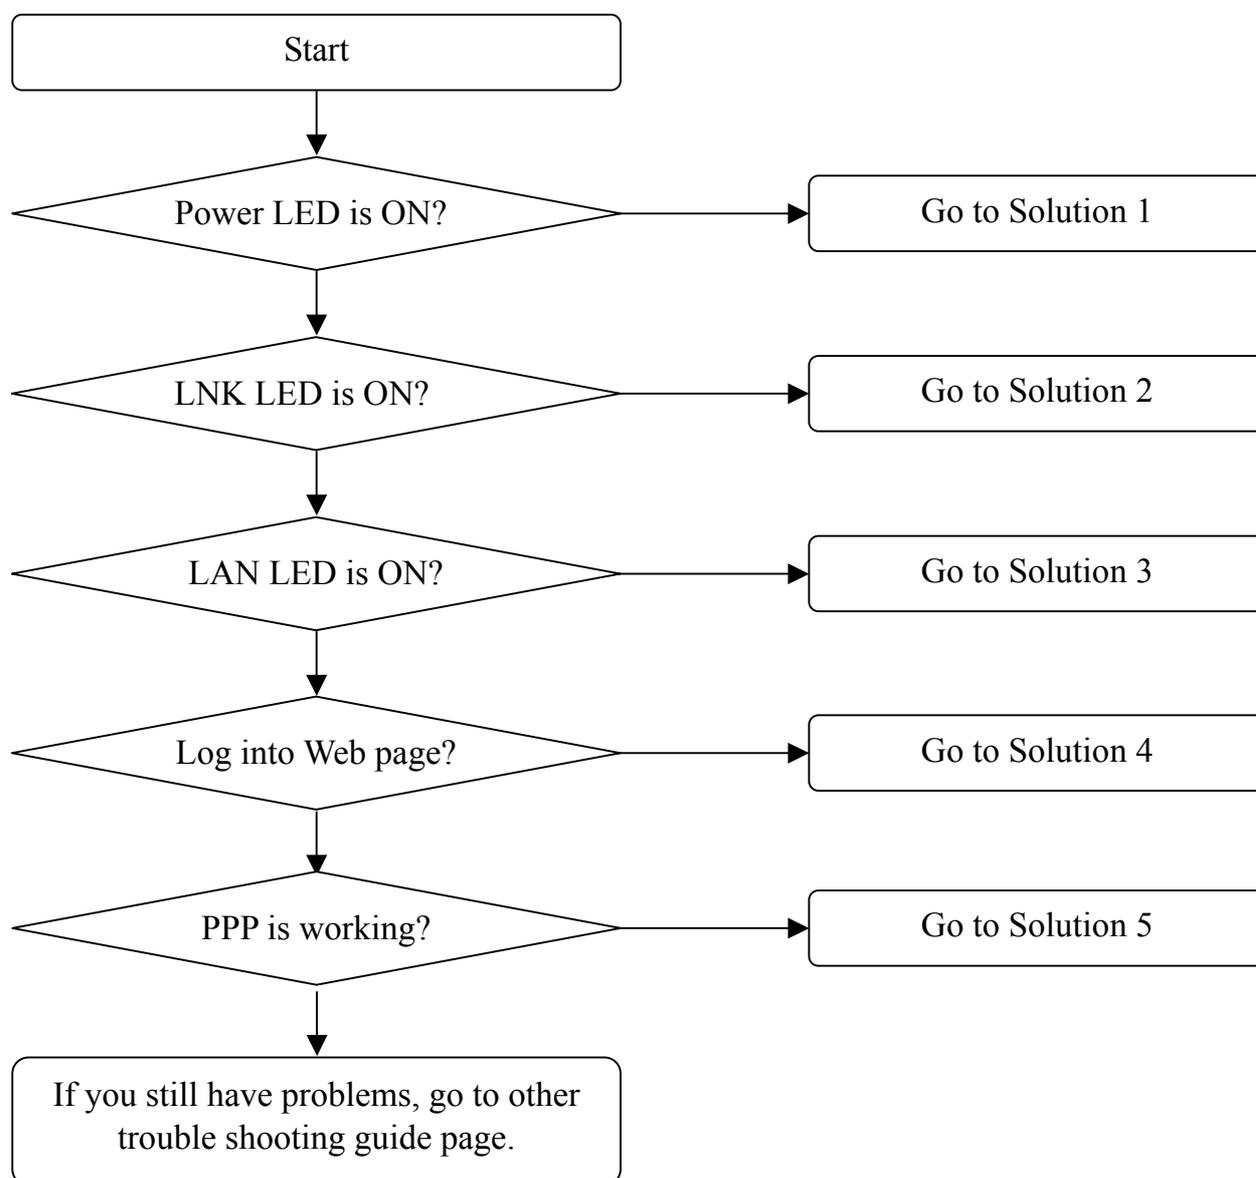

Solution 1

Problem: Power LED is not flashing.

1. Check the power adaptor is correctly connected.
2. Check the power adaptor is 14VDC and 1.0A. If it is not, don't connect that power adaptor to the power jack in the modem and contact your local distributor to change the power adaptor.
3. Touch the power adaptor **just a moment**. If the temperature is too high, disconnect the power adaptor from the power source and contact your local distributor to change the power adaptor.

Caution: The temperature of defective power adaptor may be too high, user must be careful when disconnecting from the power source.

Solution 2

Problem: ADSL LNK LED is not flashing.

1. If LNK LED is not flashing or blinking, check the RJ-11 cable connection between LINE port of the modem and ADSL port of the micro-filter.
2. If LNK LED is not flashing and blinking, it means that there's no ADSL signal to the AHT-E300 ADSL Router. In this case contact your service provider if there's problem in their service network or not.
3. If LNK LED is just blinking and not flashing, it means that there's an ADSL signal. But because there may be a lot of noise, AHT-E300 ADSL Router cannot connect to the DSLAM (DSL Access Multiplexer) in the CO (Central Office). In this case contact to your service provider if there's problem in their service network or not.
4. If LNK LED is flashing just a while and blinking some while, it means that there's some noise fluctuation. When there's low noise in the ADSL line, AHT-E300 ADSL Router sync with DSLAM in the CO. But when some noise fluctuation has occurred, AHT-E300 ADSL Router drops the synchronization with DSLAM to get enough noise margins. In this case contact to your service provider if there's problem in their service network or not.
5. If LNK LED is just blinking, check that RJ-11 cable is connected to the PHONE port of the modem or PHONE port of the micro-filter.

Solution 3

Problem: LAN LED is not flashing.

1. Check the supplied RJ-45 straight through LAN cable is correctly connected.
2. If you want to connect the straight through LAN cable to HUB, connect to Uplink port of the HUB.
3. If your HUB doesn't have the Uplink port, use the RJ-45 cross-cable to any port of HUB.

Solution 4

Problem: Cannot log into the web page.

1. Check the IP configuration of the PC. The IP address of the PC must have same subnet as AHT-E300 ADSL Router. For example, if you set the IP address of AHT-E300 ADSL Router as 192.168.10.1 and disable the DHCP server, the IP address of the PC is 192.168.10.x (the range of x is from 2 to 255.), the subnet mask is 255.255.255.0 and the gateway is 192.168.10.1. And connect to <http://192.168.10.1>.
2. If you enable the DHCP server, you can obtain IP address automatically and connect to the gateway. The gateway IP address of the PC is the IP address of the AHT-E300 ADSL Router.
3. If you forgot the IP address of the AHT-E300 ADSL Router, press the factory default button and set the IP address of the PC as "obtain IP address automatically". And you can connect to <http://10.0.0.2> as usual.

Solution 5

Problem: PPP connection is not working.

Case 1. RFC1483 Bridge mode (3rd party PPPoE client software)

1. If LNK LED and LAN LED are flashing, there may be the PPPoE software problem in your PC. Check the software is working properly.
2. Check that your ID and password for the PPP connection.
3. If someone is using your ID and password in other point, you may have trouble to connect to the Internet.
4. Check that you're using the supplied RJ-45 straight-through LAN cable.
5. Check the VPI/VCI number is correctly configured and bridge is enabled in the **[Configuration-WAN]** page.
6. If the PPPoE connection is not still working, contact to your service provider whether there's problem in their service network or not.

Case 2. PPPoA and PPPoE (without 3rd party PPPoE client software)

1. Check that your PC can get the ping reply from AHT-E300 ADSL Router. For example, `c:\>ping 10.0.0.2`. If you cannot get the ping reply from AHT-E300 ADSL Router, press the factory default button to start from the factory default settings.
2. Check that your ID and password for the PPP connection.
3. If someone is using your ID and password in other point, you may have trouble to connect to the Internet.
4. Check that you're using the supplied RJ-45 straight-through LAN cable.
5. Check the VPI/VCI number is correctly configured and bridge is enabled in the **[Configuration-WAN]** page.
6. Check that AHT-E300 ADSL Router got the PPP IP address from your service provider at **[Admin Privilege-Route Table]**. If AHT-E300 ADSL Router doesn't get the PPP IP address, try to reboot AHT-E300 ADSL Router by turning off and on.
7. If the PPPoA/PPPoE connection is not still working, contact to your service provider whether there's problem in their service network or not.

Other Troubles

Problem: PPP connection is not always on.

To save the IP addresses, your service provider may disconnect you when there's no data traffic for a while. If you want to be always on, enable the PPP reconnect on WAN access at [Admin Priviledge-Misc Configuration]. With this option is enabled, AHT-E300 ADSL Router connect to the PPP server automatically when there's an internet access.

Problem: Download speed is not so fast.

ADSL connection is just from the DSLAM in the CO to your modem. Depending on your service provider or service that you want to connect, download speed may vary.

Appendix

Glossary



III

10BaseT:

An Ethernet standard that uses twisted wire pairs.

100BaseTX:

IEEE physical layer specification for 100 Mbps over two pairs of Category 5 UTP or STP wire.

CSMA/CD (Carrier Sense Multiple Access/Collision Detection):

The LAN access method used in Ethernet. When a device wants to gain access to the network, it checks to see if the network is quiet (senses the carrier). If it is not, it waits a random amount of time before retrying. If the network is quiet and two devices access the line at exactly the same time, their signals collide. When the collision is detected, they both back off and each waits a random amount of time before retrying.

DHCP (Dynamic Host Configuration Protocol):

DHCP is protocol that enables network administrator to manage centrally and assign IP address in system automatically. Using the TCP/IP, each station must have a unique IP. DHCP server makes the IP address to be automatically assigned to the

stations whose have the DHCP client function. With DHCP server, the IP address need not be entered manually.

DNS (Domain Name System):

DNS is the way that Internet domain name are located and translated into IP address. A domain name is a meaningful and easy-to-remember handle for an IP address.

Dynamic IP Address:

An IP address that automatically assigned to a client station. Network devices that serve multiple users are usually assigned static IP addresses.

IP Address:

It is a 32-binary digit number that identifies each sender or receiver of information that is sent in packet across the Internet.

IPCONFIG:

A Windows NT or 2000 utility that provides for querying, defining and managing IP addresses within a network. A commonly used utility for configuring networks with static IP addresses.

ISP (Internet Service Provider):

It is business that provides service to let users connect to the Internet.

MAC Address (Media Access Control Address):

It is a 64- binary digit number that set as unique hardware number for network adapter.

PPPoE (Point to Point Protocol over Ethernet):

It is a method used mostly by DSL provider for connecting personal computers to a broadband modem for Internet access. It is similar to how a dial-up connection works but at higher speeds and quicker access.

PPTP (Point to Point Tunneling Protocol):

It is protocol that allows corporations to extend their own corporate network through private “tunnels” over the public Internet. Effectively, a corporation uses a wide-area network as a single large local area network.

Static IP Address:

It is a permanent IP address that is assigned to a node in a TCP/IP network.

TCP/IP (Transmission Control Protocol/Internet Protocol) :

It is the basic communication language or protocol of the Internet. It can also be used as a communication protocol in a private network. When you are set up with direct access to the Internet, your PC is provided with a copy of the TCP/IP program just as every other PC that you may send message to or get information from also has a copy of TCP/IP.

**Cautions****Cautions during installation**

- **Use with proper voltage.**
The product can be damaged or be in risk of fire.
- **Do not disassemble, repair or remodel the product.**
The product may be damaged.
- **Avoid dust and humidity.**
The product may operate less effectively or be in danger of electric shock.
- **The power outlet must have a grounding terminal.**
It prevents electric shock when electric leakage occurs.
- **Do not connect other products with high power consumption with a multi-tap.**
It may cause danger of fire due to overheating.
- **Do not let children touch a desiccant.**
Children may try to eat, and it is very dangerous.

Cautions during use

- **Change any damaged power cord and power adapter.**
They may cause risk of electric shock and fire.

- **Keep the product, power cable and AC adapter far from heating appliances.**
They can be a source of fire or can cause deformation of the product.
- **Do not touch the power cord with wet hand.**
It may cause risk of electric shock and fire.

We value your feedback.

If you find errors or omissions in this manuscript, or if you can suggest ways to improve its usefulness, we would be pleased to hear from you.

You can find the latest AHT-E300 ADSL Router firmware, software and related documents at:

<http://www.sem.samsung.co.kr/adsl>